

## Using the power override box

If your keypad does not respond, don't be alarmed. Most likely the batteries are dead and need replacing.

You will be able to open the safe using the power override wire as follow:

1. Take 4 'AA' batteries and insert them in the power override box (provided with your safe)
2. Locate the connector under the keypad and plug it in snugly as shown in fig. 4

The battery override feature is used to give power to the lock from the outside of the safe when the internal batteries are dead.

Power override jack



fig.4

3. While the battery box is plugged in, go a head and enter your 6 digit code as you normally would and open the safe. (see fig. 5)
4. Now you can replace the batteries inside the safe by referring to the previous page in this manual.

### NOTES:

- The override box is only to be used in an emergency when the internal batteries die or very low.
- Unplug the override wire after replacing the internal batteries.



fig.5

**NEVER LOCK THE OVERRIDE BOX INSIDE THE SAFE**

## LED Interior Light System (Optional)

- You may have purchased your safe with an optional LED interior light system installed.
- The LED interior light will go on for 30 seconds after the safe is opened. You can toggle the light ON and OFF by pressing the **ENTER** key during those 30 seconds.
- The power for LED light system is coming from the same batteries that power the keypad lock. Since it's a very low power consumption light system, it will not drain the batteries any faster than it would without the light.
- It is best to shut off the light after closing the door by pressing the **ENTER** key once. The blue LED light on the keypad will stay "on" when the interior light is "on".

### Adjusting the shelves:

The safe model you purchased may include adjustable velvet shelves. These shelves may be adjusted to various heights, by changing the position of the lower shelf clip on the side rails, see fig.6  
You may dispose of the top (90 degree angle) clip by loosening the Philips-head screw, sliding out the clip to the side and re-tightening the screw as it is used for shipping purposes only.

Top clip  
(Okay to dispose)

Lower shelf clip,  
used to hold the shelf

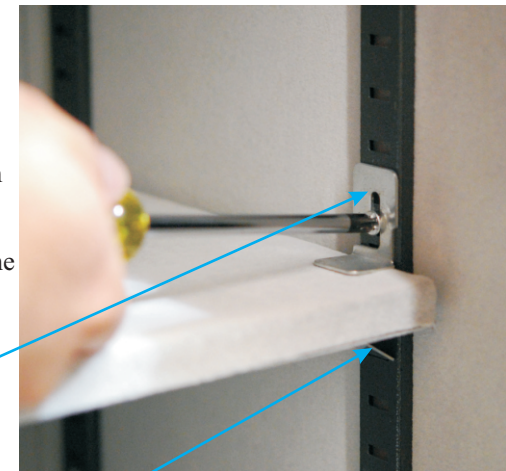


fig.6

## Installation / Bolting down your new safe

You may want to have your new safe bolted to the floor. The safe includes 4 anchoring bolts for cement (concrete) floors. We recommend hiring a locksmith, safe-installer, handyman or a contractor to bolt the safe for you.

It requires drilling into the floor with special tools and know how.

Protex Safe Co. will NOT be responsible for any damage to floors or to the safe that may happen during installation.

It is completely up to the customer to take responsibility for installation. You may use the supplied bolts or any other bolts from a hardware store. You may need different type of bolts (not supplied) when going into a wood or raised foundation floor.



fig.7


There are 4 holes located on the bottom of the safe for installation. Please see fig.7

## Low battery warning

The DigiPaz lock is equipped with a “low battery” warning.

If you open the door and hear continuous beeps and the LED flashes you know that the batteries are running low. It is recommended to change them as soon as you can.

We recommend always using Duracell or Energizer brand of AA alkaline batteries. 4 are needed to operate the lock.

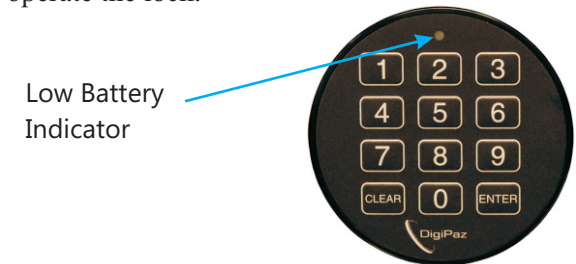

**Note:** The safe keeps the code in memory up to 6 months without power. You will not need to reprogram your code after changing batteries.

### Changing Batteries:

To replace the batteries, locate the battery box in the back of the door.

Unscrew the phillips head screw and remove the cover.

Remove the 4 batteries as shown in fig.3 and replace with new high quality Alkaline AA batteries.

The keypad will beep once when the new batteries are installed. Replace the cover and check your code to make sure that the safe is working properly.

**NEVER USE OLD OR LEAKING BATTERIES.**



fig.3

## Enrolling a new code for the first time

1. Open the door and turn the handle so the bolts are out (Locked position).
2. Press **CLEAR** and then **ENTER** (This will enter the lock into a code-change mode)
3. Now enter the factory default code (1-2-3-4-5-6) and press the **ENTER** key. (Two beeps will sound)
4. Enter your new 6 digit code and press the **ENTER** key, Enter your new 6 digit code again (for the second time) and press the **ENTER** key. Two beeps will sound indicating the acceptance of the new code.
5. Check your new code by pressing **CLEAR** your new code an then **ENTER**

## IMPORTANT:

Do not pause for more then 7 seconds when you do steps 2-4.

**We recommend that you right your new 6 digit code on a piece of paper to avoid any errors when programming.**

Always make sure to remember your new code and destroy the piece of paper it's written on, **NEVER LOCK YOUR CODE INSIDE THE SAFE.**

## TIPS:

- Your code must consist of 6 digits
- Always press the 'ENTER' key after the 6th (last) digit
- Do not use the 'CLEAR' key or the 'ENTER' key as part of your 6 digit code
- If you make a mistake in the middle you can always press the 'CLEAR' key to clear and start over.
- Check your new code at least 3 times with the door open before you close the safe.

## Changing your code

Repeat steps 1-6 on this page except enter your existing code (the code you are using to open the safe) instead of the factory code in step 3.

Serial Number: \_\_\_\_\_

Model Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Notes: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



Protex Safe Co. ("Protex Safe Co.") warrants to the original purchaser that the product(s) shall be free of defects in material and workmanship for a period of one (1) year from the date of manufacture by Protex Safe Co. (complete safes). This warranty applies provided there is compliance with all installation/operating instructions supplied by Protex Safe Co. and, provided further, that the product has been subject to normal use without any misuse, negligence, modification, or the occurrence of accidental damage.

PROTEX SAFE CO. MAKES NO OTHER WARRANTY WITH RESPECT TO THE PRODUCT, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY AS TO SUITABILITY OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE OR THE MERCHANTABILITY THEREOF AND SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE SUSTAINED THROUGH BURGLARY, THEFT, ROBBERY, FIRE OR OTHER HAZARD. THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS EXPRESSED OR IMPLIED BY LAW AND/OR CUSTOM.

In the event of a defect in materials or workmanship covered by this warranty, the purchaser shall return, at purchaser's expense, the product to Protex Safe Co. for repair or replacement. Repair or replacement shall be at the election of Protex Safe Co. The purchaser's sole remedy shall be the repair or replacement of the product and under no circumstances shall Protex Safe Co. be liable to the purchaser or any other person for any consequential, incidental, economic, direct, indirect, general or special damages arising out of any breach of warranty. In no event shall Protex Safe Co.'s liability exceed the original cost of the product.

This warranty and remedies set forth above are exclusive and in lieu of all others, oral or written, expressed or implied. No dealer, distributor, agent or employee is authorized to make any modification or addition to this warranty.

PROTEX SAFE CO. EXPRESSLY DISCLAIMS ANY WARRANTY OF NONINFRINGEMENT PROVIDED UNDER KRS 355.2.312, UCC §2-312, OR SIMILAR LAW. PROTEX SAFE CO. SHALL NOT INDEMNIFY NOR BE RESPONSIBLE FOR ANY DAMAGES ARISING OUT OF A CLAIM THAT THIS PRODUCT INFRINGES ANY PATENT.

Some states do not allow the exclusion or limitation of implied warranties or limitation of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

**NOTICE**

Installation of the product with any unapproved accessorial item or product may invalidate the Protex Safe Co., Limited Product Warranty.


Opening your safe for the first time:

1. Press **CLEAR**-1-2-3-4-5-6-**ENTER** (This is the factory default code) the blue LED light will stay on when the code is accepted. Turn handle clockwise to open the safe. If the LED flashes rapidly and you hear a fast wobbly beep, it means that you entered the wrong code. Please try again. If you enter the wrong code for five consecutive times, the lock will go into a LOCKOUT mode and you won't be able to open the safe for 15 minutes\*. (During this period, the LED light will blink once every 5 seconds). If this happens, please wait until the blue LED stops blinking (after about 15 minutes) and then try again. The LOCKOUT mode is a security feature to prevent someone from trying to manipulate the lock by entering guessed codes.

Locking the safe:

The safe will remain unlocked until you turn the handle back and press 'ENTER' (If you do not lock the safe within 20 seconds, the blue LED light on the keypad will remain lit and a beep will sound every 5 seconds to remind you that the safe is still unlocked). **YOU MUST PRESS 'ENTER' TO LOCK THE SAFE.**

After pressing 'ENTER' if the LED flashes rapidly and you hear a fast wobbly beep, it means that the safe did not lock. Turn the handle to the locked position and try again.

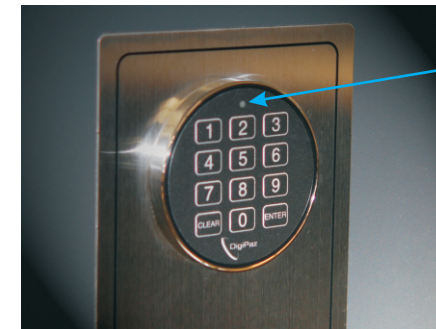

LED indicator

\* A warning (fast beeping) alarm will sound if the lock entered a LOCKOUT mode.

# Content



Opening the safe.....	2
Enrolling /Changing a code.....	3
Low battery warning.....	4
Using the Battery override wire.....	5
Replacing batteries.....	4
Optional LED light.....	6
Adjusting the shelves.....	6
Installation.....	7
Notes.....	8
Warranty.....	9



## User Manual



**DigiPaz-510™** | **PROGRAMMING  
ELECTRONIC LOCK | AND OPERATION**

**V 6.11**



Protex Safe Company  
8445 Canoga Avenue  
Canoga Park, CA 91304  
USA

TEL: 818-773-8030  
FAX: 818-773-8003  
[www.protexsafe.com](http://www.protexsafe.com)